

98-39 Stock 98 Barrel

98-40 Barrel O-Ring

SL2-4 Front Bolt O'ring

98-16 Linkage Arm

98-12A Valve/Rear Bolt O-Ring (2)

TA05005 Rear Bolt Plug

CA-14 Drive Spring

CA-15 Guide Pin

98-57 Buffer O-Ring

98-05P End Cap

02-17 Front Bolt 98

98-21P Power Tube

02-22 Velocity Screw

98V Valve Complete

TA0211 Rear Bolt

98-13 Bolt Handle

98-01L Receiver (Left)

98-01A Receiver Bolt (Short) (5)

98-01B Receiver Bolt (Long)(1)

98-07R Front Grip (Right)

98-07L Front Grip (Left)

INTERNAL VALVE PARTS:
Valve Disassembly Not Recommended

98-25N Valve Body

SL2-25 Valve Seat O-Ring (2)

PA-31A Valve Snap Ring

98-56 Valve Plug

98-32 Valve Spring

98-PL Valve Plunger

CA-27 Front Valve Seat

Front Sight

Front Sight Spring

Front Sight Pin

CA-02A Grip Screw (2)

TA-05004 Split Grip (left)

98-25N Valve Body
SL2-25 Valve Seat O-Ring (2)
PA-31A Valve Snap Ring
98-56 Valve Plug
98-32 Valve Spring
98-PL Valve Plunger
CA-27 Front Valve Seat



- WARNING**
DO NOT FIELD STRIP OR OTHERWISE DISASSEMBLE
THIS MARKER WHILE IT IS PRESSURIZED WITH AIR.

TIPPMANN
1-800-533-4831
www.tippmann.com

PL-42D Hopper Nut
 98-42 Feed Latch Bolt (2)
 98-43 Feed Elbow Latch
 98-14 Front Sight
 98-15 Front Sight Pin
 98-44 Front Sight Spring
 FA-18 Ball Latch
 98-33 Receiver Dowel Pin (6)
 98-19 Return Slide Dowel Pin (2)
 98-36A Trigger
 98-37N Safety
 98-55 Safety O-Ring (Red)
 FA-07 Safety O-Ring (Black)
 98-20 Trigger Return Slide Spring
 98-18 Trigger Return Slide
 98-09N Gas Line
 PL-01A Adapter Bolt (short)
 98-06A Adapter Bolt (Long)
 98-04 Feed Elbow
 98-04A Feed Elbow Pin (2)
 98-26 Valve Lock Bolt (2)
 98-27P Sight Dove Tail
 98-28P Rear Sight
 98-45 Flat Washer
 PL-42C Hopper Bolt
 9-PA Receiver Nut (6)
 CA-02A Grip Screw (2)
 TA-05003 Split Grip (Right)
 98-01R Receiver (Right)
 CA-08B Adapter Nut (2)
 98-06 Tank Adapter

REV 06/13/2005

REV 06/13/2005